


# EDUCATION CELL

## Quick Start Guide

# FANUC

### STEP 1

Unpack the cell, wheel it into position and lock the wheels in place. The adjustable feet can be used for additional stability.

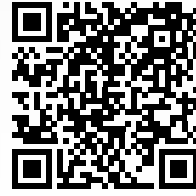

### STEP 2

Download and read the Technical Documentation:

[www.fanuc.eu/educational-package](http://www.fanuc.eu/educational-package)



### STEP 5

Turn on the Main Power Switch and follow the instructions on the Teach Pendant to run the demo program.

### STEP 4

Remove the Auto-T1-T2 switch key from inside the controller and insert into the switch on the front of the controller in the Auto position.

### STEP 3

Remove the Teach Pendant from the accessory box and connect the Teach Pendant and Mains Power Cables.

